INSTRUCTION BOOKLET

ZANUSSI

WASHER-DRYER
WS 1094 H

CONTENTS

Warnings . . . . . page 3
Installation . . . . . page 4
Unpacking . . . . . page 4
Positioning . . . . . page 4
Water inlet . . . . . page 4
Water drainage . . . . . page 5
Levelling . . . . . page 5
Positioning . . . . . page 5
Electrical connections. . . . . page 6
Getting to know your machine . . . . . page 7
Control panel . . . . . page 7
Detergent dispenser compartments . . . . . page 7
Washing and drying hints . . . . . page 8
Wash care symbols . . . . . page 9
Programmes for cotton and linen . . . . . page 10
Programmes for synthetics, delicate fabrics and wool . . . . . page 11
Use of detergent and additives . . . . . page 12
Using your machine . . . . . page 13
Washing 4 kg of white cotton . . . . . page 13
Autodrying 2 kg of white cotton . . . . . page 14
Drying 4 kg of cotton . . . . . page 15
Maintenance and cleaning . . . . . page 16
Descaling, after each wash, external cleaning . . . . . page 16
Cleaning the detergent dispenser . . . . . page 16
The dangers of freezing . . . . . page 16
Cleaning the filter . . . . . page 17
Servicing . . . . . page 18
Guarantee conditions . . . . . page 19

TECHNICAL SPECIFICATIONS

DIMENSIONS	Height with back panel Height without back panel Width Depth	89.5 cm (35.2") 85 cm (33.5") 45 cm (17.7") 60 cm (23.6")
POWER SUPPLY VOLTAGE		220-230V / 50Hz
TOTAL POWER ABSORBED		2300W (13A)
WATER PRESSURE	Minimum Maximum	7 psi (5 N/cm^2) 116 psi (80 N/cm^2)
MAXIMUM RECOMMENDED LOAD FOR WASHING	Cotton, linen Synthetics, delicate fabrics Wool	10 lb (4.5 kg) 4.5 lb (2 kg) 2.2 lb (1 kg)
MAXIMUM RECOMMENDED LOAD FOR DRYING	Cotton, linen Synthetics	4.5 lb (2 kg) 3 lb (1.5 kg)
SPIN SPEED	Maximum/minimum	1000/650 rpm

WARNINGS

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings.

These warnings are provided in the interest of safety. You MUST read them carefully before installing or using the appliance.

- This appliance is designed to be operated only by adults. Children should not be allowed to tamper with the controls or play with the product.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- This product should be serviced by an authorised Zanussi Service Centre, and only genuine Zanussi spare parts should be used.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- Always unplug the appliance and turn off the water after use.
- Do not overload the appliance. Follow the instructions in the relevant section of this booklet.
- This appliance is heavy. Care should be taken when moving it.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions.
- Leave the lid open for a while after washing to eliminate any steam.
- Only wash garments which are designed to be machine washed. If in doubt, consult the care label on the clothes.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust and grass before washing. Underwired bras must not be machine washed.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard or sharp material can cause extensive damage and must not be placed into the appliance.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing it into the machine.
- Wash small items such as socks, laces, washable belts etc. in a pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine.
- The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing.
- Only tumble dry fabrics which are designed to be tumble dried. If in doubt, consult the care label on the clothes.
- Never tumble dry items that have been in contact with chemicals such as dry cleaning fluid. These are of a volatile nature and can cause an explosion. Only tumble dry items which have been washed in water or require airing.
- Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to-dry you should use the conventional detergent dispenser.
- The inner drum reaches high temperatures during the drying cycles. The lid should NOT be opened during the drying cycle, or until the full 8 minute cool down phase is completed, as injury can occur. If in an emergency you wish to open the drum during a drying cycle, then advance the timer to the beginning of the cool phase. On completion of the cool down phase the lid may be opened.
- Pets or little children have been known to climb into washing machines. Please check your drum before use.
- **If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.**
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning. Contact your local Zanussi Service Centre. Always insist on genuine Zanussi spare parts.

INSTALLATION

Unpacking

Before installing the machine up, the packing must be removed as follows.

You are advised to keep all the packaging for re-use in case the machine is to be transported again.

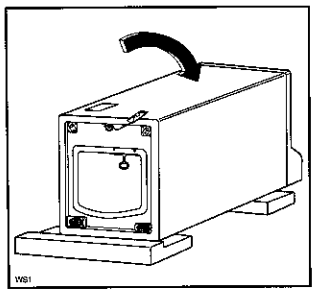

Lay the machine carefully on its back making sure that the hoses, mains lead and plug are not squashed.

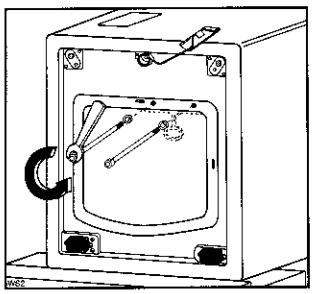

Unscrew and remove the two bolts.

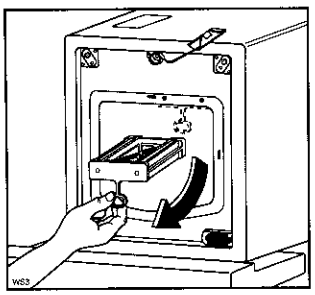

Remove the inner block by pulling out the red ring.

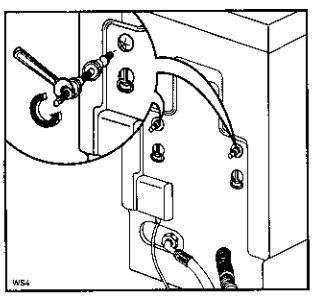

Set the machine upright, then using a spanner remove the two nuts at the back of the machine.

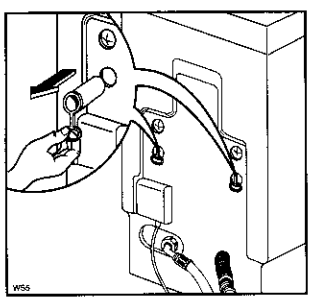

Remove the two plastic spacers by pulling out the red rings.

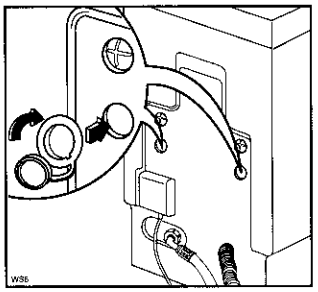

Plug the holes with the black plastic plugs supplied with the instruction booklet.

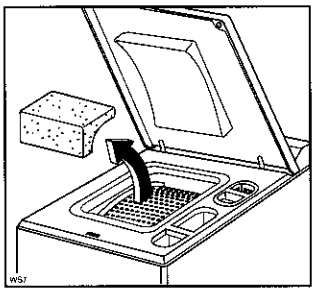

Open the lid and take the polystyrene block away.

Positioning

Your new Zanussi washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to a suitable existing tap, with the drain hose discharging into a sink.

The appliance has one inlet hose, with female $^{3}/_{4}$" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alterations to your existing plumbing must be carried out by a competent person, or qualified plumber.

Water inlet

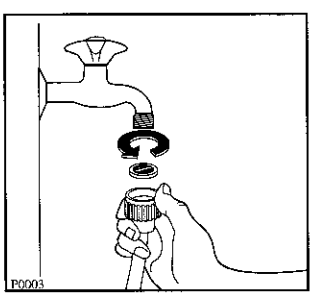

Before connecting the hose be sure to fit the mesh filter supplied as per diagram.

Installation should comply with local water authority and building regulations' requirements.

If you cannot make the water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system.

There should be a minimum distance of 5.02m (16 $^{1}/_{2}$ft) between the appliance's inlet and the bottom of the tank.

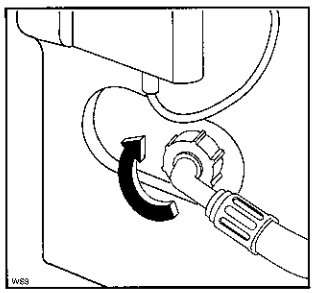

Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

Water drainage

If you intend the drain hose from the machine to empty into a sink, make sure that the sink is empty and that the plug hole is not blocked.

If the machine is permanently plumbed in, hook the end of the hose into a standpipe installed for the purpose. The standpipe must have an internal diameter of at least 40 mm (1 ½") in order that there is an air gap between the drain hose and the standpipe. Make sure that it is designed in such a way, that the end of the drain hose cannot be covered with water.

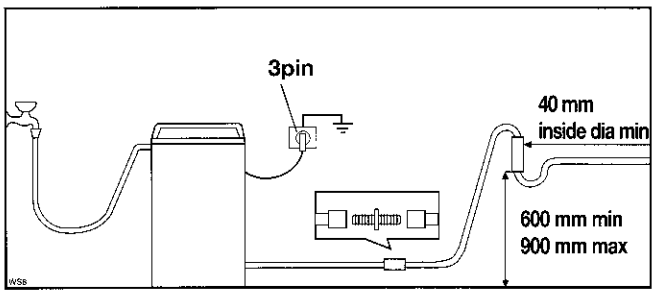

Important

Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

Whether discharging into a sink or a standpipe check that the end of the drain hose is neither too high nor too low. The top of the curve in the hose's end should be no more than 90cm (35.4"), and no less than 60cm (23.6") above floor level.

Levelling

Level the machine by loosening or tightening the feet. Accurate levelling prevents vibration, noise and displacement of the machine during operation. After levelling the machine, secure the feet by tightening the ring nuts with the aid of a spanner.

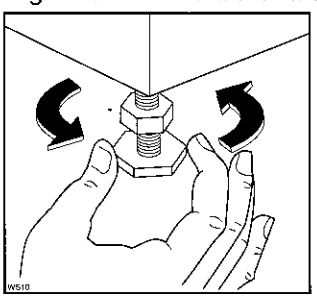

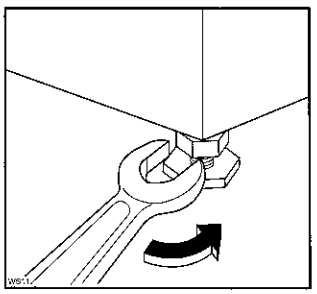

Some vibration is inevitable, especially if mounted on a wooden floor.

Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor.

Special conditions

If the floor is carpeted with a deep-pile carpet or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine.

Warning

The machine should NOT be placed on deep pile carpeting.

Note

Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

All plumbing and electrical work required to install this appliance must be carried out by competent persons or qualified plumbers or electricians.

Positioning

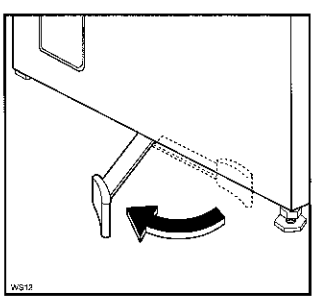

Your machine can easily slide in and out from its position by lowering the retractable roller. To do this, turn the special lever at the bottom front of the machine from the right to the left. (This can be done with your foot.)
Reverse the procedure when the machine is back in place.

The electrical connections

WARNING: THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any liability should this safety measure not be observed.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.

Remove the fuse from the cut off plug.
The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13amp socket in another part of your home.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral

Brown - Live

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

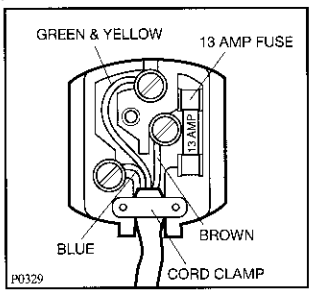

Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol ⏚, or coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black.

Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red.

The plug moulded onto the lead incorporates a fuse. For replacement, use a 13amp BS1362 fuse. Only ASTA or BSI approved fuses should be used.

The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug.

A replacement cover/carrier must be obtained from your local Zanussi Service Force Centre whose address is listed in the Customer Care Booklet which accompanies your instruction manual.

This appliance complies with the E.E.C. Directive No. 87/308 of 2.6.87 relative to radio interference suppression.

GETTING TO KNOW YOUR MACHINE

Control panel

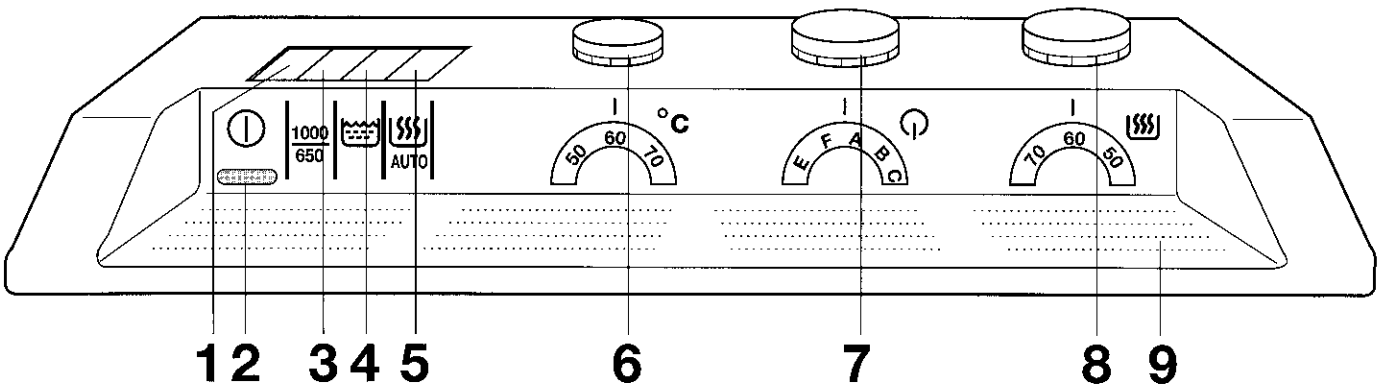

1 ON/OFF button ⏻

Press it to start a programme.
Press it again to stop a programme or to switch off the machine.
In an emergency or before setting / changing a programme already in progress, the machine must be switched off by pressing this button.

2 MAINS-ON light

This light comes on when the ON/OFF button is pressed and the machine is working.

3 SPIN REDUCTION button 1000/650

Press this button if you wish to reduce the spin speed from 1000 to 650 rpm with cotton-linen programmes.

4 INTENSIVE RINSES button

Press this button if you wish to increase the quantity of rinse water with cotton-linen programmes.

5 AUTODRYING button AUTO

Press this button if you wish to dry a small load of laundry automatically at the end of the wash cycle (max. 2 kg for cottons and max. 1.5 kg for synthetics).

6 Temperature selector dial °C

Lightly press this dial to make it pop out then select the required washing temperature, visible in the semi-circular window below the dial (from cold ✳ to 90°C).

7 Programme selector dial

Lightly press this dial to make it pop out then select the required washing programme by turning it clockwise.

8 Drying time selector dial

Lightly press this dial to make it pop out then select the required drying time, visible in the semi-circular window below the dial, up to 120 minutes.

9 Programme chart

Detergent dispenser compartments

Lift the lid to gain access to the detergent dispenser compartments located to the right of the drum.

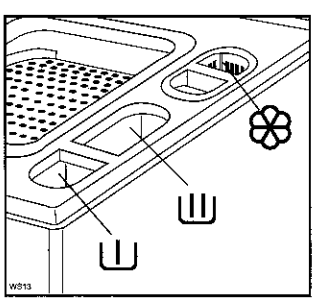

I Prewash compartment
II Wash compartment
❀ Softener compartment

Washing and drying hints

Do **NOT** overload the machine. Weigh the laundry the first few times you use the appliance.

The average weights of the most common items are listed below as a guide:

1000g = 1kg

Sheet	700-1000 g
Pillow case	100-200 g
Tablecloth	400-500 g
Serviette	50-100 g
Tea towel	70-120 g
Linen hand towel	100-150 g
Towelling hand towel	150-250 g
Towelling bath towel	700-1000 g
Bath robe	1000-1500 g
Man's shirt	200-300 g
Apron	150-200 g

- Load the laundry loosely alternating large items with small ones.
- Sort the laundry according to the type of fabric, colour-fastness and how dirty it is.
- Avoid washing unhemmed or torn items as they may unravel.
- Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc), as these could damage the drain pump.
- When washing curtains, remove the hooks.
- Close poppers and zips and fasten loose buttons.
- It is essential to wash new coloured items separately when washing for the first time.
- When washing fabrics requiring different wash temperatures together, always select the lowest temperature.
- White items should not be washed with coloured items.
- Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case.
- Use a good quality detergent suitable for automatic washing machines.
- Use the correct quantities of detergent.
- For wool, use gentle detergent only in small quantities.
- Bleach is very corrosive; it should be used with care and kept out of reach of children.
- Some stains such as fruit, wine, grass, rust etc are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special pre-soak product or biological detergent.
- Only wool marked "Pure New Wool - washable, pre-shrunk" can be washed in the machine using the wool programme; other types of wool should be washed by hand or dry cleaned.
- When drying always load well spun laundry. The higher the spin speed the lower is electric energy consumption during drying and the shorter is the drying time.
- Do not leave the damp laundry load in a heap too long before drying.
- Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff.
- If you overdry the laundry, besides wasting energy, any subsequent ironing may become more difficult because the fabric could be heavily crumpled.
- Remove the laundry when the appliance has finished drying.
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- For drying, follow the indications given on the manufacturers' labels.

  Drying at high temperature

  Drying at reduced temperature

  Do not tumble dry

- Once you have finished using the machine, you are advised to unplug it and turn off the water tap.

Wash care symbols

The familiar wash code symbols which are found on the care labels in most clothes are disappearing and a new set is introduced. The change is due to changes in fabrics and detergents and because people are tending to use fewer programmes and mix fabrics in one load.
The change brings the codes into line with the labelling used in the rest of Europe.

Old Symbol	New Symbol	Wash Action	Fabric
1		Normal (Maximum)	White Cotton or Linen without Special Finishes
2		Normal (Maximum)	Cotton, Linen or Viscose without Special Finishes Colourfast at 60°C
3	No longer used. White Nylon, Polyester/Cotton mixtures now included in		
4		Reduced (Medium)	Nylon, Polyester/Cotton, Viscose with Special Finishes: Cotton/Acrylic Mix.
5		Normal (Maximum)	Cotton, Linen or Viscose Colourfast at 40°C but not 60°C
6		Reduced (Medium)	Acrylic, Acetate, Triacetate, Wool mixes, Polyester/wool blends
7		Much Reduced (Minimum)	Wool, wool mixes. Silks
8	No longer used. Silk now included in printed acetate included in		
9	No longer used		

The new wash symbols appear on the side of Washing Powder packets.

Programmes for cotton and linen

Maximum load:	washing	10 lb (4.5 kg)
	washing + drying	4.5 lb (2 kg)
	drying	4.5 lb (2 kg

WASHING

Programmes	Degree of soil	Detergent compartments	Temperature selector dial position	Programme selector dial position	Cycle description
Soaking	Heavy		**40°**	**A**	Soak at 40° Stop with water in drum To drain, select programme T (Drain)
Whites	Normal		**60°-90°**(*)	**B**	Wash at 60°-90° Rinses Spin
Coloureds	Normal		**40°-60°**(*)	**C**	Wash at 40°-60° Rinses Spin
Rinses				**D**	Rinses with additive if required Spin
Spin				**F**	Drain and spin

(*) 60°-90°C means that any temperature between 60° and 90°C may be selected. The same applies to 40°-60°C.

DRYING

Fabric type	Quantity lb (kg)	Cupboard dry mins.	Iron dry mins.	Programme selector dial position	Cycle description
Cotton and linen (following long spin at 1000 rpm)	4.5 (2)	65	60	**G**	Drying can be selected as a separate programme, or you can wash and dry by depressing the button AUTO and setting a drying time at the beginning of the wash programme. Please remember that the drying capacity is half the washing capacity. **Do NOT use ball dispensers on Wash'n Dry programmes.**
	2.2 (1)	45	40		
	1 (0.5)	35	30		

Programmes for synthetics, delicate fabrics and wool

Maximum load : washing 4.5 lb (2 kg)
washing + drying 3 lb (1.5 kg)
drying 3 lb (1.5 kg)

WASHING

Programmes	Degree of soil	Detergent compartments	Temperature selector dial position	Programme selector dial position	Cycle description
Soaking	Heavy		40°	H	Soak at 40° Stop with water in drum To drain, select programme T (Drain)
Synthetics	Normal		40°-60°(*)	J	Wash at 40°-60° Rinses Short spin
Synthetics	Normal	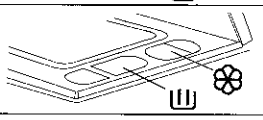	30°-40°	K	Wash at 30°-40° Rinses Short spin
Rinses				L	Rinses Short spin
Wool	Normal		30°-40°	N	Wool programme at 30° or 40° Rinses Short spin
Delicates	Normal	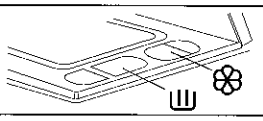	✳-40°(*)	P	Cold wash or at 40° Rinses Short spin
Rinses				Q	Rinses with additive, if required Short spin
Softener rinse				R	Rinse with additive, if required Short spin
Short spin				S	Short spin
Drain				T	Drain

(*) 40°-60°C means that any temperature between 40° and 60°C may be selected. The same applies to ✳-40°C.

DRYING

Fabric type	Quantity lb (kg)	Cupboard dry mins.	Programme selector dial position	Cycle description
Synthetics (following short spin at 850 rpm)	3 (1.5)	50	M	Drying can be selected as a separate programme, or you can wash and dry by depressing the button AUTO and setting a drying time at the beginning of the wash programme. **Automatic drying can take place only on programmes J-K-L.** Please remember that the drying capacity is half the washing capacity. **Do NOT use ball dispensers on Wash'n Dry programmes.**
	2 (1)	35		
	1 (0.5)	25		

Use of detergent and additives

Choosing the right detergent

Always use a low lather powder or liquid. This is important as too much lather prevents the articles from being properly cleansed and may damage the machine.

Use of powder detergent (such as Ariel Automatic)

The washing powder should be placed in the appropriate compartments in the detergent dispenser before starting the programme.

Compact powder detergents (such as Ariel Ultra)

The compact powder should be placed in the wash compartment of the dispenser. The unique recirculating system ensures that the powder is dissolved.

Liquid detergents (such as Ariel Liquid)

A liquid detergent can be used in the wash compartment of the dispenser. Start the machine immediately upon placing the liquid in the dispenser.

Specialist detergents (such as Dreft Automatic)

Specialist detergents are now available for washing coloured and woollen garments. These detergents do not contain bleach and should not be used for white cotton. Follow the manufacturer's instructions.

Important

As the Jetsystem is flexible and adjusts water intake according to wash load size it is not possible to give you exact recommendations as to the amount of detergent that should be used for any one wash.

Therefore we recommend that you use one ¼ to ⅓ less than the detergent manufacturer recommends on the packet or bottle, making the appropriate allowances for soft or hard water, and light or heavy soilage of clothes. If you have judged the amount correctly you should expect to see a soft sudsy liquid during the wash. It is not necessary to have a head of lather on the water.

Note

When using concentrated or liquid detergents and a prewash or soak programme, remember that detergent will have to be placed into the machine for the main wash, after the pre-wash or soak has finished.

Use of liquid additives

Any liquid additives for softening or dressing the laundry must be poured into the appropriate compartment of the detergent dispenser before starting the programme.

The compartment with the symbol ❀ is for softeners and dressing agents; never exceed the MAX level.

When using super concentrated fabric conditioners such as Lenor Ultra, please follow the manufacturer's instructions carefully.

Washing net curtains

To avoid an excessive and damaging amount of lather, it is advisable t[illegible]n large curtains singularly and take extra care when measuring the detergent.

Should an excess of lather accidentally occur, switch off the machine, advance the programme to a short spin sequence which is preceded by a drain cycle, to remove the lather and then start the wash again.

USING YOUR MACHINE

WASHING 4 KG OF WHITE COTTON

Suppose you have 4 kg of normally dirty laundry to wash. It is white cotton and is suitable for high temperature washing.

1 Load the laundry

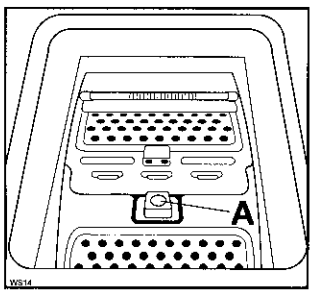

Lift the lid, position the drum as shown in the figure and open it with both your hands by pressing the button A: the two flapdoors will then disengage.

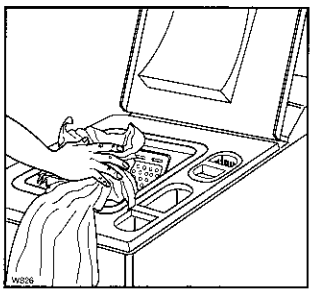

Load the laundry into the drum, one garment at a time, shaking them out as much as possible. Close the drum doors.

2 Measure out the detergent

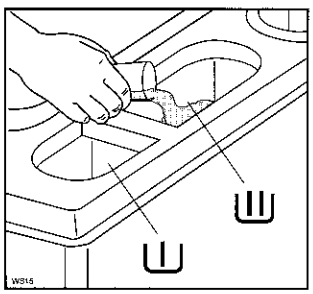

Measure out the amount of detergent required and pour into the main wash compartment.

If you wish to carry out the soak programme, pour the amount of detergent required into the "prewash" compartment ⊔.

3 Add the fabric softener if required

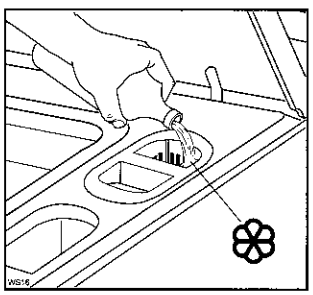

Pour the fabric softener, if required, into the compartment marked ❀. Do not exceed the MAX level and then close the lid gently.

4 Select the required programme

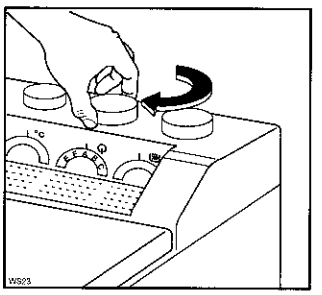

Turn the programme selector dial (Q) to the required position.

5 Select the temperature

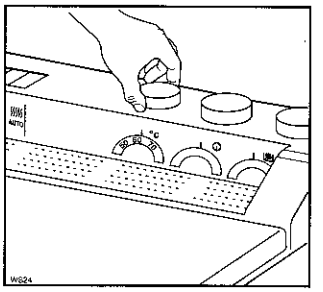

Turn the temperature selector dial (°C) to the temperature recommended in the programme chart, according to the type of fabric and its colour-fastness.

6 Depress the button(s) required

If you wish to reduce the spin speed or increase the quantity of rinse water, depress the 1000/650 or ≈ buttons respectively.

7 Start the machine

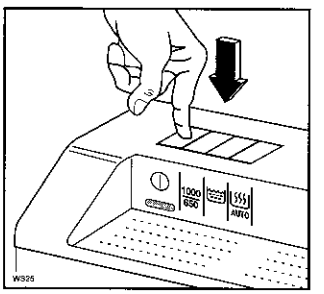

Before starting up the machine check that:

- the appliance is plugged in
- the water supply tap is turned on
- the drain hose is correctly and securely positioned
- the lid is closed.

Depress the ON/OFF (⏻) button, the mains-on light will illuminate and the machine will start operating.

8 At the end of the programme

The machine stops automatically.

The lid is controlled by a safety device which releases 2 minutes after the end of the programme.

Switch the machine off by depressing the ON/OFF button again, the mains-on light goes out.

Release the button(s) depressed.

When the programme has finished you are advised to unplug the appliance and turn off the water tap.

AUTODRYING 2 KG OF WHITE COTTON

You intend to wash and dry automatically 2 kg of white cotton.

1 Load the laundry

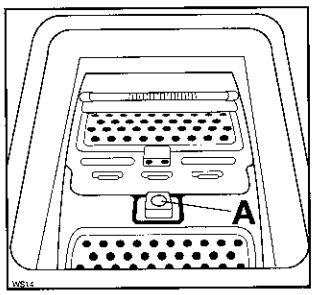

Lift the lid, position the drum as shown in the figure and open it with both your hands by pressing the button A: the two flapdoors will then disengage.

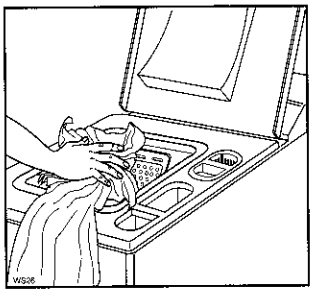

Load the laundry into the drum, one garment at a time, shaking them out as much as possible. Close the drum doors.

2 Measure out the detergent

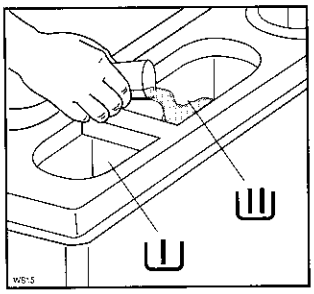

Measure out the amount of detergent required and pour into the main wash compartment.
Do not use ball dispensers on Wash'n'dry programmes.

If you wish to carry out the soak programme, pour the amount of detergent required into the "prewash" compartment.

3 Add the fabric softener if required

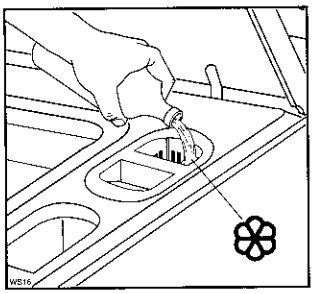

Pour the fabric softener, if required, into the compartment marked ❀.
Do not exceed the MAX level and then close the lid gently.

4 Select the required programme

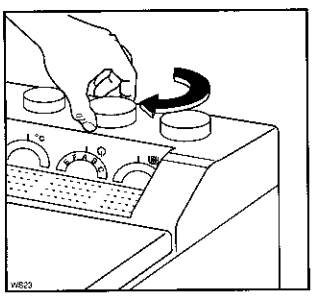

Turn the programme selector dial (○) to the required position.

5 Select the temperature

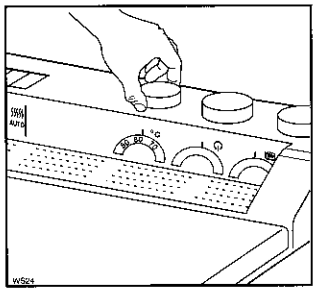

Turn the temperature selector dial (°C) to the temperature recommended in the programme chart, according to the type of fabric and its colour-fastness.

6 Depress the button(s) required

Depress the autodrying button AUTO.
If you wish to reduce the spin speed or increase the quantity of rinse water, depress the 1000/650 or buttons respectively.

7 Select the drying time

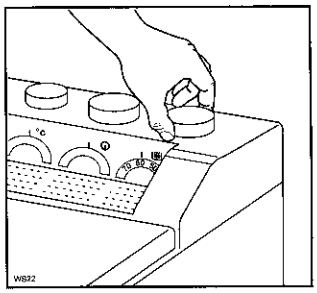

Turn the drying time selector dial to the required time, as recommended in the programme chart, according to the degree of dryness required.

8 Start the machine

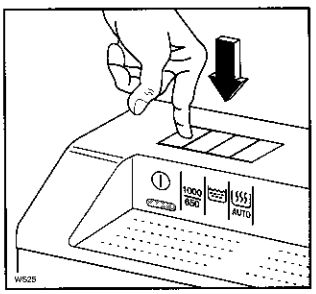

Before starting up the machine check that:
- the appliance is plugged in
- the water supply tap is turned on
- the drain hose is correctly and securely positioned
- the lid is closed.

Depress the ON/OFF (⏻) button, the mains-on light will illuminate and the machine will start operating.

After the wash, the programme being over, the programme selector turns automatically on the drying position and the drying programme begins.

9 At the end of the programme

The machine stops automatically.

The lid is controlled by a safety device which releases 2 minutes after the end of the programme.

Switch the machine off by depressing the ON/OFF button again, the mains-on light goes out.

Release the button(s) depressed.

When the programme has finished you are advised to unplug the appliance and turn off the water tap.

DRYING 4 KG OF COTTON

You have for example just machine-washed and spun at 1000 rpm 4 kg of laundry.
They are cotton fabrics of medium weight which you want to iron as soon as they are dry.
Switch off the machine.
Then remove the laundry from the appliance and divide the items to obtain two loads of approx. 2 kg each.

1 Load the laundry

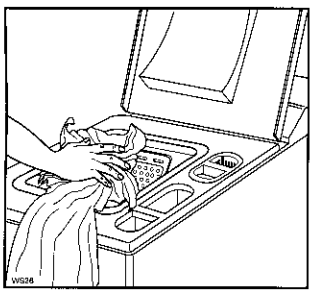

Load the items one at a time, close the drum and then the lid.

2 Select the drying time

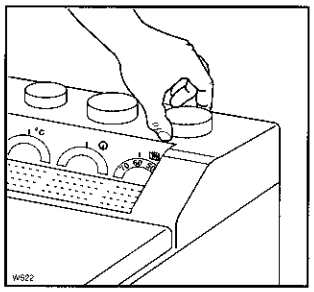

Turn the drying time selector dial to the required time, as recommended in the programme chart, according to the degree of dryness required.

3 Start the machine

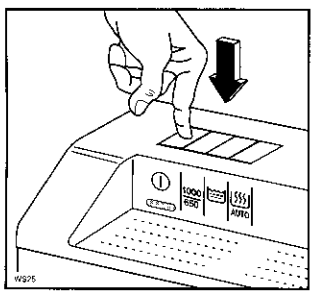

Depress the ON/OFF button, the mains-on light will illuminate and the machine will start operating.

4 At the end of the programme

The machine stops automatically.

Switch the machine off by depressing the ON/OFF button ⏻.

The lid is controlled by a safety device which releases 2 minutes after the end of the programme.

Remove the laundry and place the second half-load to be dried in the drum.

Start the machine by depressing the ON/OFF button ⏻ again.

MAINTENANCE AND CLEANING

Before any maintenance or cleaning is carried out you must **DISCONNECT** the appliance from the electricity supply.

Descaling

The water we normally use contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

After each wash

Leave the lid open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the lid open after a wash will also help to preserve the door seal.

External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

Cleaning the detergent dispenser

From time to time the detergent dispenser should be cleaned.

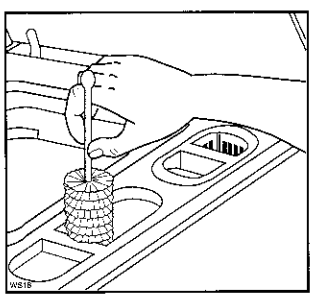

Use a small brush to clean the compartments, ensuring that all washing powder residue is removed from the upper and lower part.

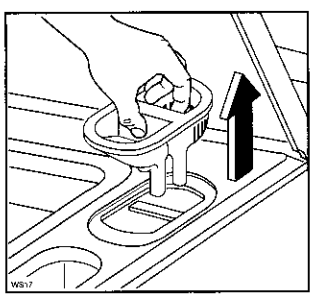

To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

Once you have finished cleaning, run the rinse programme for a few minutes without any clothes in the drum.

The dangers of freezing

If the machine is exposed to temperatures below 0°C, certain precautions should be taken.

- Turn off the water tap.
- Select a wash programme and run for a few seconds.
- Unscrew the inlet hose.
- Unhook the drain hose from the rear support and position the end in a bowl. Run the draining programme for a few seconds.
- When you intend to start the machine up again, make sure that the room temperature is above 0°C.

Cleaning the filter

The water drain filter

A clean filter is important for a correct functioning of the machine, and should therefore be cleaned after every wash.

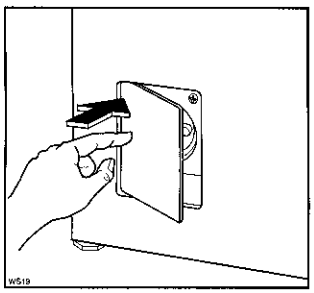

Open the filter door and place a container underneath to catch any spillage. If the filter is blocked and the machine is unable to drain you will need to drain the water manually from the machine at this stage. To do this, unhook the drain hose from the standpipe or sink and hold the end of the hose over a bowl on the floor. The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out.

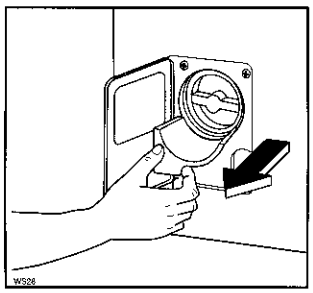

Pull out the small gutter located under the filter to help collecting any residual water.

Unscrew and remove the filter.

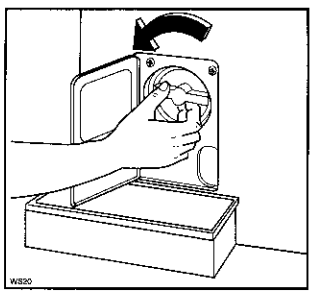

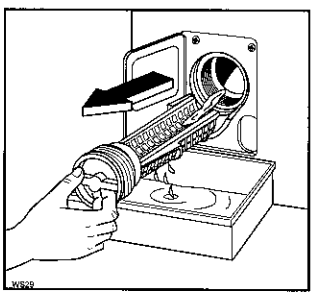

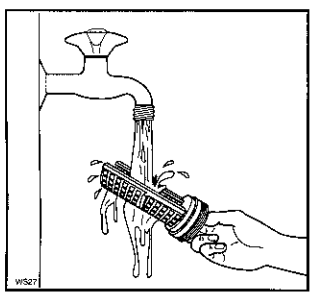

Clean carefully under a fast running tap.

Warning

When the appliance is in use and depending on the programme selected there can be hot water in the filter. Never remove the filter during a wash cycle, always wait until the appliance has finished the cycle, and is empty.
When replacing the filter, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

The water inlet filter

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.

It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose.

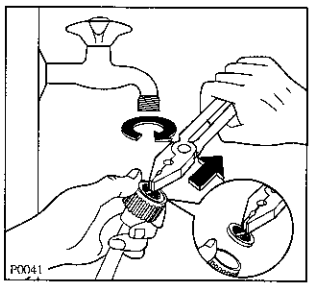

Remove and clean the filter using a hard bristle brush. Replace the filter and tighten up the inlet hose.

SERVICING

Before contacting your local Zanussi Service Centre, please make the following checks:

The machine does not start up

- The ON/OFF button has not been depressed
- The lid is not closed properly
- No water is entering the machine (see: the machine does not fill)

The machine does not fill

- The water tap is not turned on
- The water supply has been disconnected
- The inlet hose is kinked
- The water pressure is too low
- The water inlet filter is clogged

The machine empties as it fills

- The end of the drain hose is too low
- The end of the drain hose is submerged in water
- Drain pipe has no vent-hole

The machine does not drain or spin

- The drain filter is clogged
- The drain hose is kinked
- The drainage system pipes are blocked
- The drain hose extension is incorrect

The machine leaks or overflows

- Too much detergent
- Unsuitable detergent
- The inlet hose is loose
- The detergent dispenser is clogged
- The drainage system pipes are blocked

The machine vibrates or is noisy

- The internal packing has not been removed
- The machine is not level
- The machine is in contact with the wall or furniture
- The washing load is badly distributed
- The machine is overloaded

The lid does not open

- The safety device has locked it

The machine does not dry

- The drying time has not been selected
- The water tap is not turned on
- The drain filter is clogged
- The machine is overloaded
- The selected drying time is not adequate
- The Dry button has not been depressed.

If, after the above checks, there is still a fault, call your local Zanussi Service Centre, whose address can be found in the accompanying Customer Care Booklet, and can also be found in your local telephone directory under «Z». Please make sure you give the model and serial number of the appliance.

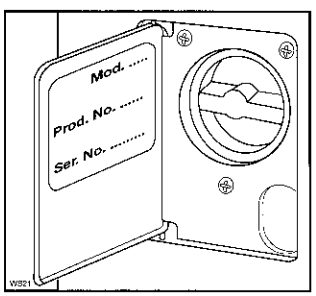

This information can be found on the rating plate (see picture) or on the guarantee card.

Original spare parts can be purchased from Zanussi Service Centres.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for any in-guarantee service calls.

Service details - adhesive label

When you return your guarantee card to Zanussi Ltd., you will receive a "Appliance Guarantee And Maintenance Record" together with an adhesive label containing the telephone number of your local Zanussi Service Centre. The label can be adhered to the machine or adjacent furniture.